

Figure 1



Touch the screen to Begin (You'll hear a beep).

Figure 2




Similar to your home remote control, use the touch-screen to select the video source to display via the LCD projector. The Smart Classroom Touch-Screen is surrounded by 10 buttons (five on each side). The buttons' functions are labeled on **Figure 2**.

Figure 3



Confirm Power OFF by pressing YES

Figure 4

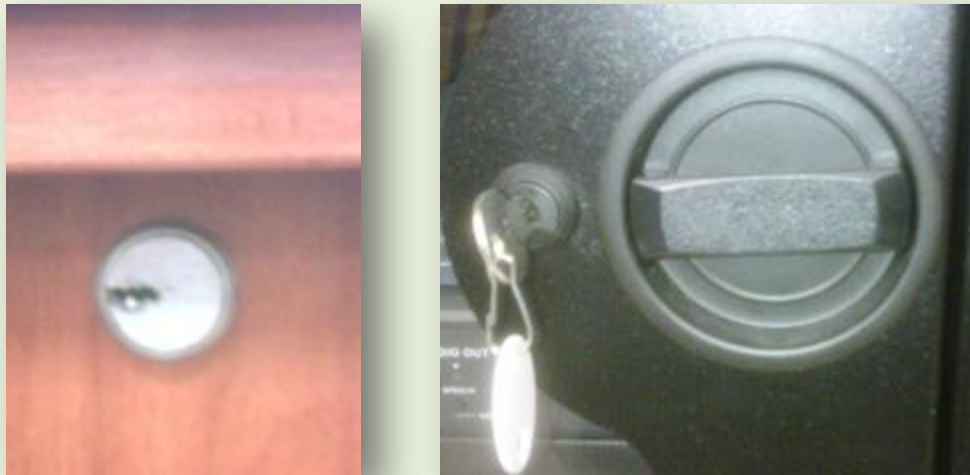

Making sure the Unit is Shut Down; **please** ensure the **unit is locked** in the front and the side.